

Installation Instructions

CS Jamb Kit™


CS Cavity Sliders Pocket Door Jamb Kit

Before You Start

Please ensure your purchased product is compatible with the CS Jamb Kit™. The CS Jamb Kit™ is designed for use with a single, 4" Framing (2x4) CS Cavity Slider® Pocket Door Frame or 6" Framing (2x6) CS Cavity Slider® Ultimate Pocket Door Frame that meets the specifications in the table below.


If your door is smaller than the listed sizes, refer to the parts list for the necessary formula to cut the head jams, split jams, and closing jamb to size.

Framing	Door Size	Jamb Size	Door Thickness
4" Framing (2x4 Stud)*	3'0" x 8'0"	4-9/16"	1-3/8"
			1-3/4"
		4-7/8"	1-3/8"
			1-3/4"
	4'0" x 8'0"	4-9/16"	1-3/4"
		4-7/8"	1-3/4"
6" Framing (2x6 Stud)	3'0" x 8'0"	6-9/16"	1-3/8"
			1-3/4"
		6-7/8"	1-3/8"
			1-3/4"
	4'0" x 8'0"	6-9/16"	1-3/4"
		6-7/8"	1-3/4"

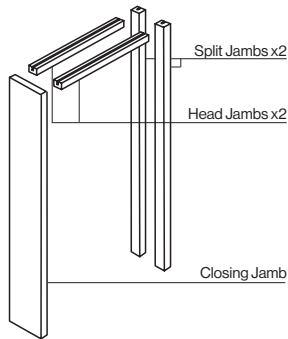

DW = Door Width DH = Door Height

If cutting the Closing Jamb **C** ensure you do **not** cut the **pre-drilled end**.

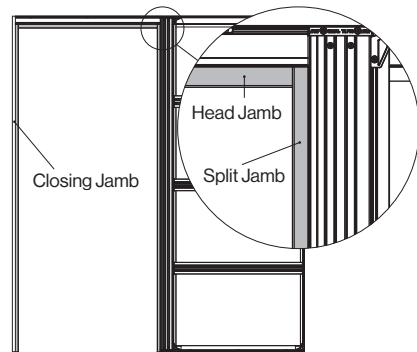

NOTE:

When cutting the jamb kit down, the split jamb trim is installed **FIRST** before the head jamb.

The split jamb trim should extend the full jamb height. Be sure to adjust the head jamb length to account for this.

Parts List

A	Head Jamb x2	DW - 3/4" (DW - 19mm)
B	Split Jamb x2	DH + 1-11/16" (DH + 42.9 mm)
C	Closing Jamb	DH + 3-11/16" (DH + 93.7mm)
D	Additional Parts	#6 x 1-1/4" (31.75mm) wood screws for attaching closing jamb to frame x2

These installation instructions begin during the **trim and finishing stage** of the CS Cavity Slider® Pocket Door Frame instructions.


Please scan the following QR code or visit **CavitySliders.com** to download the full installation instructions.



Attaching the Closing Jamb and Installing the Pocket Frame


Locate the pre-drilled holes at the top of the Closing Jamb **C** that align with the CS Track. Secure the Closing Jamb in place with the two screws provided **D**.

1.

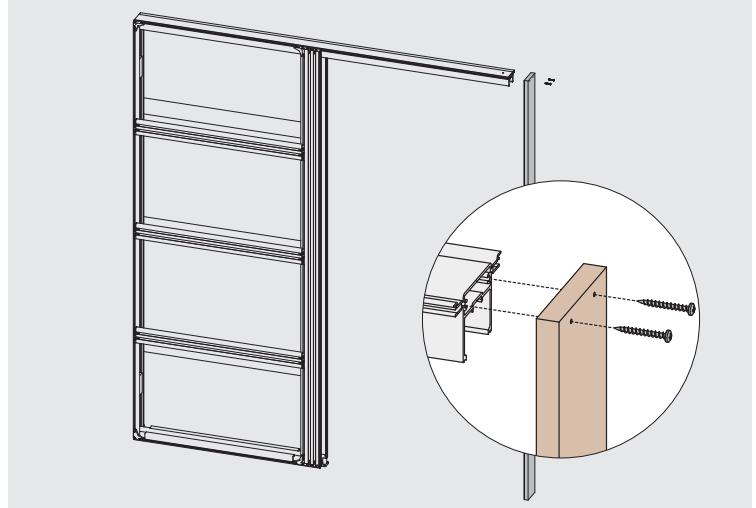

Position the pocket frame into the rough opening, using a level to ensure it is properly aligned. Secure the pocket frame by fastening it through the Back Stud, Bottom Plate and Closing Jamb.

2.

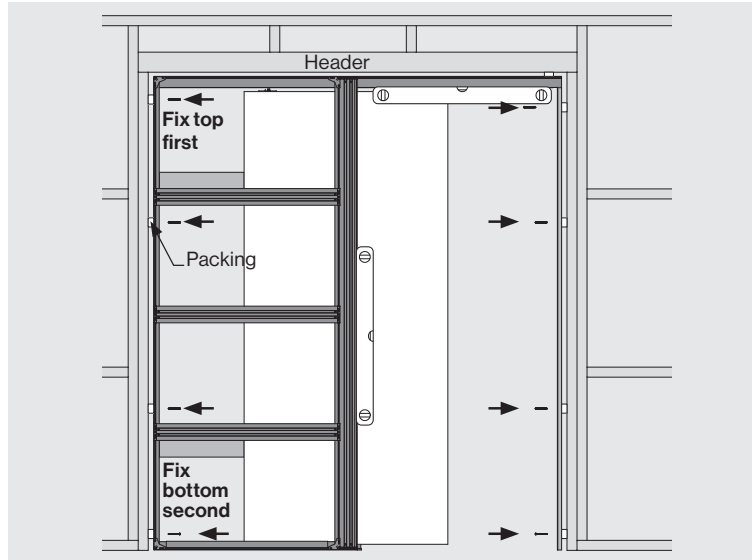


Attaching the Trim Clips

Using a rubber mallet, install the 16 CS Trim Clips into the grooved channels of the supplied Head Jamb **A** and Split Jamb **B**.

3.


Evenly distribute the clips as follows: Three (3) Trim Clips in each Head Jamb and Five (5) Trim Clips in each Split Jamb.

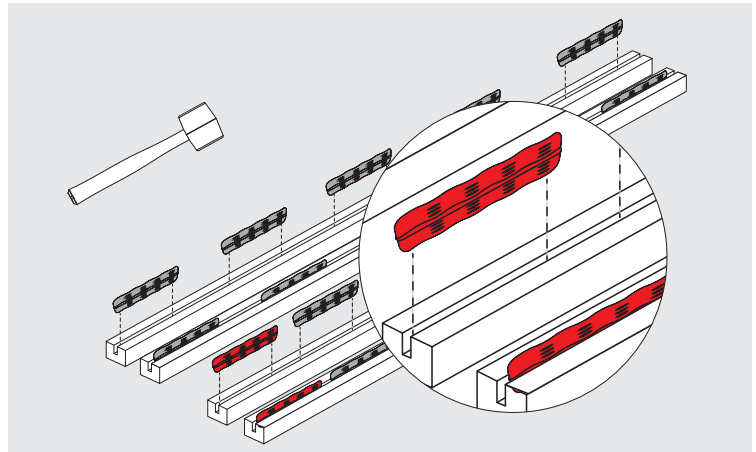

Attaching the Split Jambs and Installing the Door

Once the Trim Clips are in place, securely position the Split Jambs onto the pocket frame, ensuring a snug fit.

4.

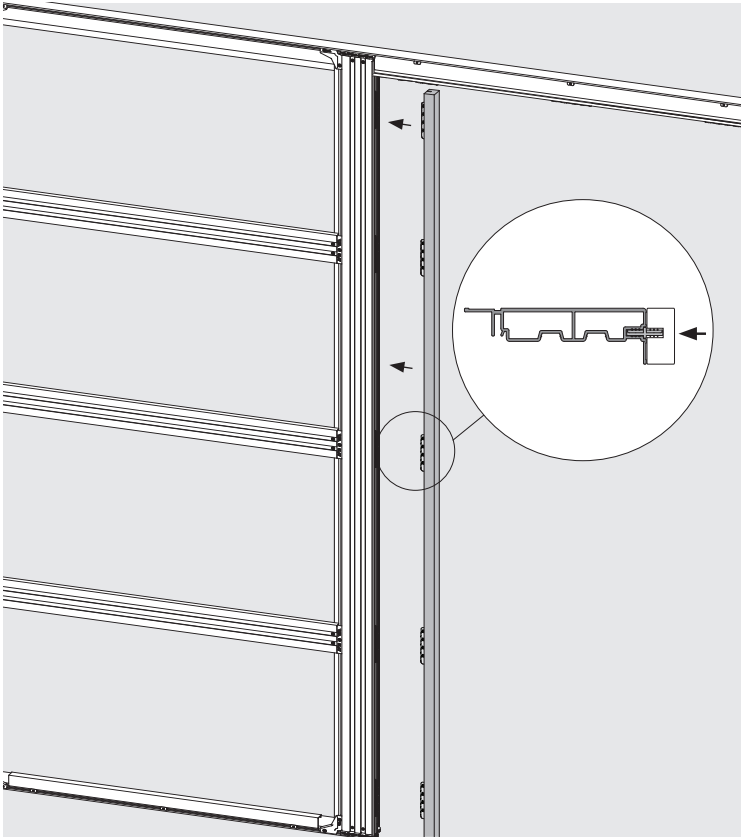

Once the Split Jambs have been installed, install your door.


5.



Attaching the Head Jambs


Before positioning the head jambs, apply a bead of construction adhesive to the groove on the backside of the head jamb.

6.

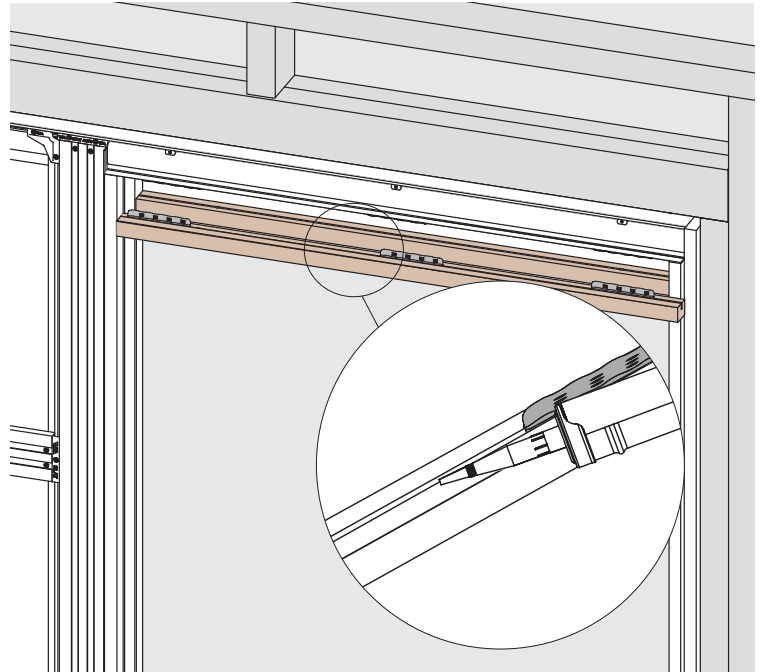

Before positioning the head jambs, apply a bead of construction adhesive to the groove on the backside of the head jamb.

7.

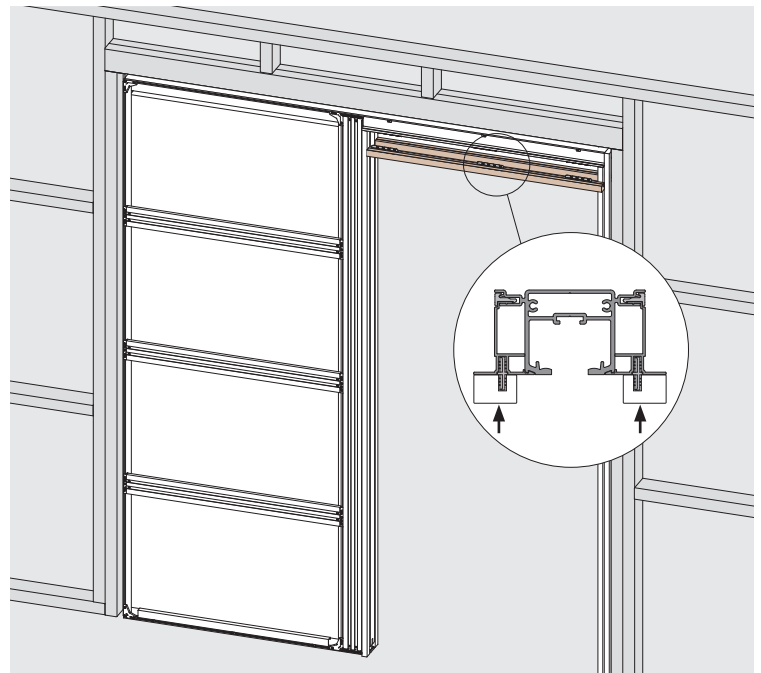

Cavity Sliders USA Inc.
2662 E Del Amo Blvd.
Carson, CA 90221

Phone: (888) 466 0030
Fax: (310) 769 5824
sales@cavitysliders.com



CavitySliders.com

© All copyright and other property in this document is reserved by Cavity Sliders USA Inc. Details and specifications are subject to change without notice. Whilst all care is taken to ensure the accuracy of all information, no responsibility will be accepted for any errors or omissions. Drawings are not to scale.

CS JAMB KIT™ (O.D. 2025). 06/2026